

Item no.	steps	handling power r.m.s / max. (w)	switch type	terminal type / pole	shorting 24v-d.c.	faceplate style	interplate style	faceplate / interplate color / material	individual packing
<b>70 volt volume controls with relay, mono</b>									
44-01011	11	10	key lock	removable / 4p	yes	Decora	Decora	white / ABS	clamshell
44-01012	11	10	key lock	removable / 4p	yes	Decora	Decora	white / ABS	white box
44-01013	11	10	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	clamshell
44-01014	11	10	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	white box
44-01015	11	10	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	clamshell
44-01016	11	10	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	white box
44-01017	11	10	key lock	removable / 4p	yes	Decora	Decora	black / ABS	clamshell
44-01018	11	10	key lock	removable / 4p	yes	Decora	Decora	black / ABS	white box
44-01021	11	25	key lock	removable / 4p	yes	Decora	Decora	white / ABS	clamshell
44-01022	11	25	key lock	removable / 4p	yes	Decora	Decora	white / ABS	white box
44-01023	11	25	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	clamshell
44-01024	11	25	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	white box
44-01025	11	25	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	clamshell
44-01026	11	25	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	white box
44-01027	11	25	key lock	removable / 4p	yes	Decora	Decora	black / ABS	clamshell
44-01028	11	25	key lock	removable / 4p	yes	Decora	Decora	black / ABS	white box
44-01031	11	35	key lock	removable / 4p	yes	Decora	Decora	white / ABS	clamshell
44-01032	11	35	key lock	removable / 4p	yes	Decora	Decora	white / ABS	white box
44-01033	11	35	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	clamshell
44-01034	11	35	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	white box
44-01035	11	35	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	clamshell
44-01036	11	35	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	white box
44-01037	11	35	key lock	removable / 4p	yes	Decora	Decora	black / ABS	clamshell
44-01038	11	35	key lock	removable / 4p	yes	Decora	Decora	black / ABS	white box
44-01041	11	50	key lock	removable / 4p	yes	Decora	Decora	white / ABS	clamshell
44-01042	11	50	key lock	removable / 4p	yes	Decora	Decora	white / ABS	white box
44-01043	11	50	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	clamshell
44-01044	11	50	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	white box
44-01045	11	50	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	clamshell
44-01046	11	50	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	white box
44-01047	11	50	key lock	removable / 4p	yes	Decora	Decora	black / ABS	clamshell
44-01048	11	50	key lock	removable / 4p	yes	Decora	Decora	black / ABS	white box
44-01051	11	75	key lock	removable / 4p	yes	Decora	Decora	white / ABS	clamshell
44-01052	11	75	key lock	removable / 4p	yes	Decora	Decora	white / ABS	white box
44-01053	11	75	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	clamshell
44-01054	11	75	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	white box
44-01055	11	75	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	clamshell
44-01056	11	75	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	white box
44-01057	11	75	key lock	removable / 4p	yes	Decora	Decora	black / ABS	clamshell
44-01058	11	75	key lock	removable / 4p	yes	Decora	Decora	black / ABS	white box
44-01061	11	100	key lock	removable / 4p	yes	Decora	Decora	white / ABS	clamshell
44-01062	11	100	key lock	removable / 4p	yes	Decora	Decora	white / ABS	white box
44-01063	11	100	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	clamshell
44-01064	11	100	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	white box
44-01065	11	100	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	clamshell

Item no.	steps	handling power r.m.s / max. (w)	switch type	terminal type / pole	shorting 24v-d.c.	faceplate style	interplate style	faceplate / interplate color / material	individual packing
44-01066	11	100	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	white box
44-01067	11	100	key lock	removable / 4p	yes	Decora	Decora	black / ABS	clamshell
44-01068	11	100	key lock	removable / 4p	yes	Decora	Decora	black / ABS	white box
<b>70 volt volume controls, mono</b>									
44-01111	11	10	key lock	removable / 4p	non.	Decora	Decora	white / ABS	clamshell
44-01112	11	10	key lock	removable / 4p	non.	Decora	Decora	white / ABS	white box
44-01113	11	10	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	clamshell
44-01114	11	10	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	white box
44-01115	11	10	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	clamshell
44-01116	11	10	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	white box
44-01117	11	10	key lock	removable / 4p	non.	Decora	Decora	black / ABS	clamshell
44-01118	11	10	key lock	removable / 4p	non.	Decora	Decora	black / ABS	white box
44-01121	11	25	key lock	removable / 4p	non.	Decora	Decora	white / ABS	clamshell
44-01122	11	25	key lock	removable / 4p	non.	Decora	Decora	white / ABS	white box
44-01123	11	25	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	clamshell
44-01124	11	25	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	white box
44-01125	11	25	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	clamshell
44-01126	11	25	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	white box
44-01127	11	25	key lock	removable / 4p	non.	Decora	Decora	black / ABS	clamshell
44-01128	11	25	key lock	removable / 4p	non.	Decora	Decora	black / ABS	white box
44-01131	11	35	key lock	removable / 4p	non.	Decora	Decora	white / ABS	clamshell
44-01132	11	35	key lock	removable / 4p	non.	Decora	Decora	white / ABS	white box
44-01133	11	35	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	clamshell
44-01134	11	35	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	white box
44-01135	11	35	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	clamshell
44-01136	11	35	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	white box
44-01137	11	35	key lock	removable / 4p	non.	Decora	Decora	black / ABS	clamshell
44-01138	11	35	key lock	removable / 4p	non.	Decora	Decora	black / ABS	white box
44-01141	11	50	key lock	removable / 4p	non.	Decora	Decora	white / ABS	clamshell
44-01142	11	50	key lock	removable / 4p	non.	Decora	Decora	white / ABS	white box
44-01143	11	50	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	clamshell
44-01144	11	50	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	white box
44-01145	11	50	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	clamshell
44-01146	11	50	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	white box
44-01147	11	50	key lock	removable / 4p	non.	Decora	Decora	black / ABS	clamshell
44-01148	11	50	key lock	removable / 4p	non.	Decora	Decora	black / ABS	white box
44-01151	11	75	key lock	removable / 4p	non.	Decora	Decora	white / ABS	clamshell
44-01152	11	75	key lock	removable / 4p	non.	Decora	Decora	white / ABS	white box
44-01153	11	75	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	clamshell
44-01154	11	75	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	white box
44-01155	11	75	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	clamshell
44-01156	11	75	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	white box
44-01157	11	75	key lock	removable / 4p	non.	Decora	Decora	black / ABS	clamshell
44-01158	11	75	key lock	removable / 4p	non.	Decora	Decora	black / ABS	white box
44-01161	11	100	key lock	removable / 4p	non.	Decora	Decora	white / ABS	clamshell
44-01162	11	100	key lock	removable / 4p	non.	Decora	Decora	white / ABS	white box

Item no.	steps	handling power r.m.s / max. (w)	switch type	terminal type / pole	shorting 24v-d.c.	faceplate style	interplate style	faceplate / interplate color / material	individual packing
44-01163	11	100	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	clamshell
44-01164	11	100	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	white box
44-01165	11	100	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	clamshell
44-01166	11	100	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	white box
44-01167	11	100	key lock	removable / 4p	non.	Decora	Decora	black / ABS	clamshell
44-01168	11	100	key lock	removable / 4p	non.	Decora	Decora	black / ABS	white box

**70 volt volume controls, mono (-1.5dB / per step)**

44-01171	11	100	key lock	removable / 4p	non.	Decora	Decora	white / ABS	clamshell
44-01172	11	100	key lock	removable / 4p	non.	Decora	Decora	white / ABS	white box
44-01173	11	100	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	clamshell
44-01174	11	100	key lock	removable / 4p	non.	Decora	Decora	ivory / ABS	white box
44-01175	11	100	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	clamshell
44-01176	11	100	key lock	removable / 4p	non.	Decora	Decora	almond / ABS	white box
44-01177	11	100	key lock	removable / 4p	non.	Decora	Decora	black / ABS	clamshell
44-01178	11	100	key lock	removable / 4p	non.	Decora	Decora	black / ABS	white box

**70 volt volume controls with relay, mono (-1.5dB / per step)**

44-01071	11	100	key lock	removable / 4p	yes	Decora	Decora	white / ABS	clamshell
44-01072	11	100	key lock	removable / 4p	yes	Decora	Decora	white / ABS	white box
44-01073	11	100	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	clamshell
44-01074	11	100	key lock	removable / 4p	yes	Decora	Decora	ivory / ABS	white box
44-01075	11	100	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	clamshell
44-01076	11	100	key lock	removable / 4p	yes	Decora	Decora	almond / ABS	white box
44-01077	11	100	key lock	removable / 4p	yes	Decora	Decora	black / ABS	clamshell
44-01078	11	100	key lock	removable / 4p	yes	Decora	Decora	black / ABS	white box